

QUICK INSTALLATION GUIDE YOU ARE NOW ONE OF THE USERS OF EASYFOAL : CONGRATS !



How to start EasyFoal :

oal

1 Add a SIM card	to the collector by	opening it (4 screws)
------------------	---------------------	-----------------------

- 2 Connect the collector to power (use the extension cable if necessary)
- **3** Wait for the LED to flash green every 3 sec. (on the left side of the collector)
- Check the phone reception by sending Cellq? » by text to the phone number of EasyFoal Answer :

< 6 : relocate your collector 6 to 11 : weak signal (it will work but try another spot) > 11 : Correct

- 5 Change the language of EasyFoal : send
 - « LangEn » for English « LangDe » for German
 - « LangEs » for Spanish
- 6 Add the sensor to the collector by sending « ASSO » followed by the sensor's number (eg : ASSO19496007)
- 7 Start the sensor with « START » followed by the sensor's number (eg : START19496007)





3 Extension cable

8 Check the communication between the collector and the sensor by sending « STATUT » followed by the sensor's number

> Answer : On stand by Started Stopped Not Reached

If the answer is "Not Reached", check the sensor's number or bring it closer to the collector

9 Set up the alarms (2 texts and 2 calls max.)

Text messages :

Send « NUMSMSA » followed by a phone number Send « NUMSMSB » followed by another phone number

Phone calls :

Send « NUMTELA » (or B) followed by a phone number

Do not forget to add your country code before your phone number

10 Test the system by sending « TEST » followed by a sensor's number. You should get a foaling alarm by text messages and phone calls as preset.



You can find a more detailed first installation guide in the user guide, from page 6 to 9.

inn

Fixing the sensor

e mare's tail with a

Clean the mare's tail with absorbent paper so that it is clean and dry.

Unroll a first layer of adhesive tape around the tail and at the level of the anus and vulva (2 to 3 turns are enough). Be careful not to tighten it to avoid a tourniquet.

Position the sensor on the adhesive at the top of the vulva with the arrow visible and pointing upwards in line with the tail (do not position the sensor at the bottom of the vulva).

Attach the sensor with a second layer of adhesive tape loosely.

















MONITORING

The fixing system allows the sensor to remain in place for up to 15 days on average. However, the position of the sensor and the state of the tape must be checked regularly.

This is because some mares may scratch themselves.

If the sensor has gone down or sideways, it is recommended to reposition the sensor using a new bandage.

RECEIVING ALERTS

On average, EasyFoal warns 10 to 20 minutes before foaling, so it is advisable to quickly go to the premises to check that the foaling is going well. déroulement de la mise bas.

The sensor can be placed immediately on another mare after foaling.

