

Manual programmable control box Horsewalker


Main menu



1. Setting: this is for the administrator. You don't need this
2. Automatic program
3. Manual operation
4. Create program
5. Load program
6. Language selection

2. Automatic program

Here you can start the automatic program you loaded in 5. Load program

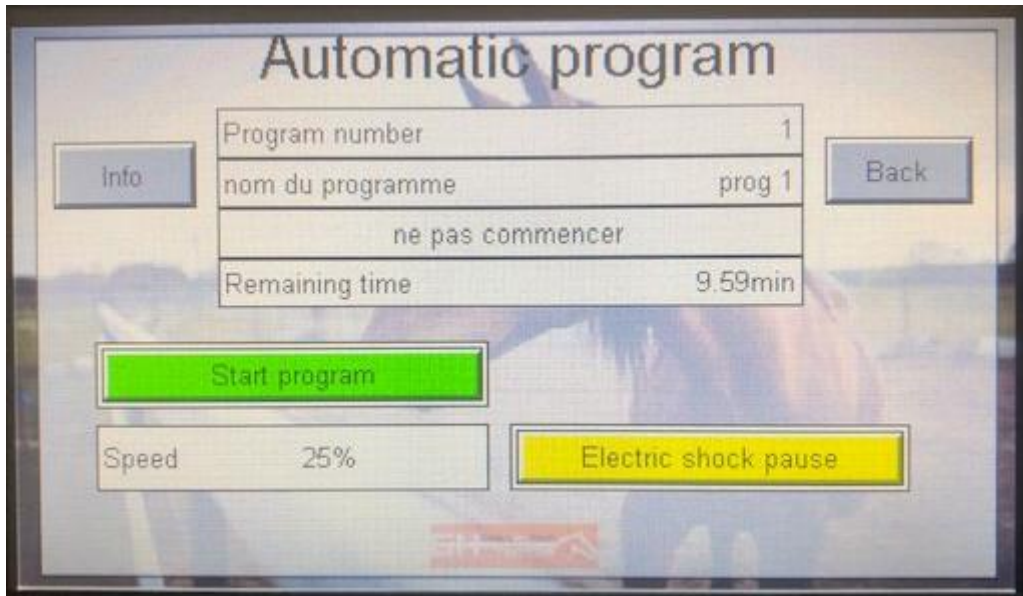


Buttons:

- Start program: start/stop program
- Electric shock pause: turn off/on electric shock on fences
- Info: displays the info of the current program
- Back: back to the main menu

Display:

- Program number: number of the loaded program
- Name program: name of the loaded program
- Remaining time: remaining time total program

3. Manual operation

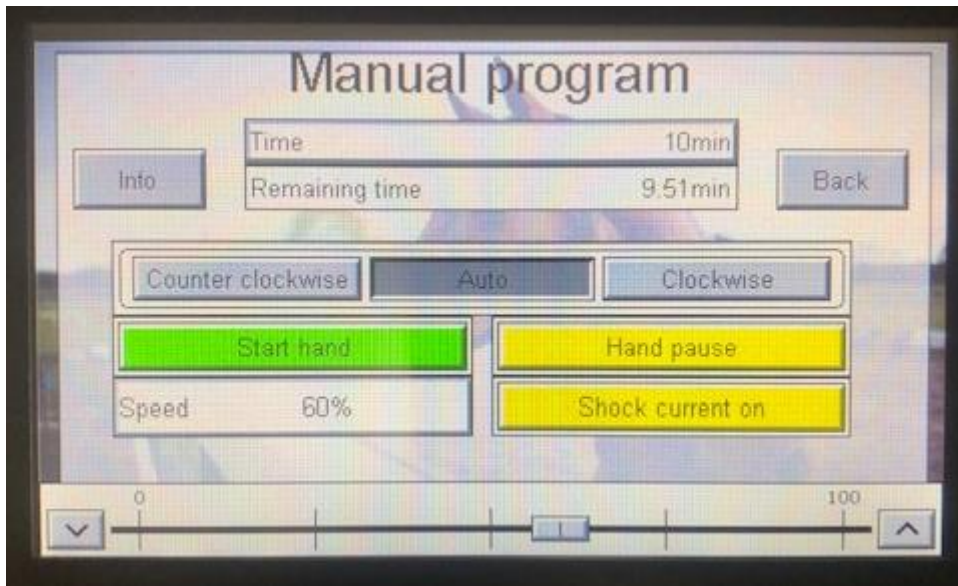


Buttons:

- Start hand: start/stop manual
- Hand pause: pause manual
- Shock current on/off
- Counter clockwise – Auto – Clockwise: rotation direction of the walker
- Info: displays the info of the current program
- Back: back to the main menu
- Speed: current speed you can adjust in the bottom bar

Display:

- Time: total time manual
- Remaining time: remaining time manual

4. Create program

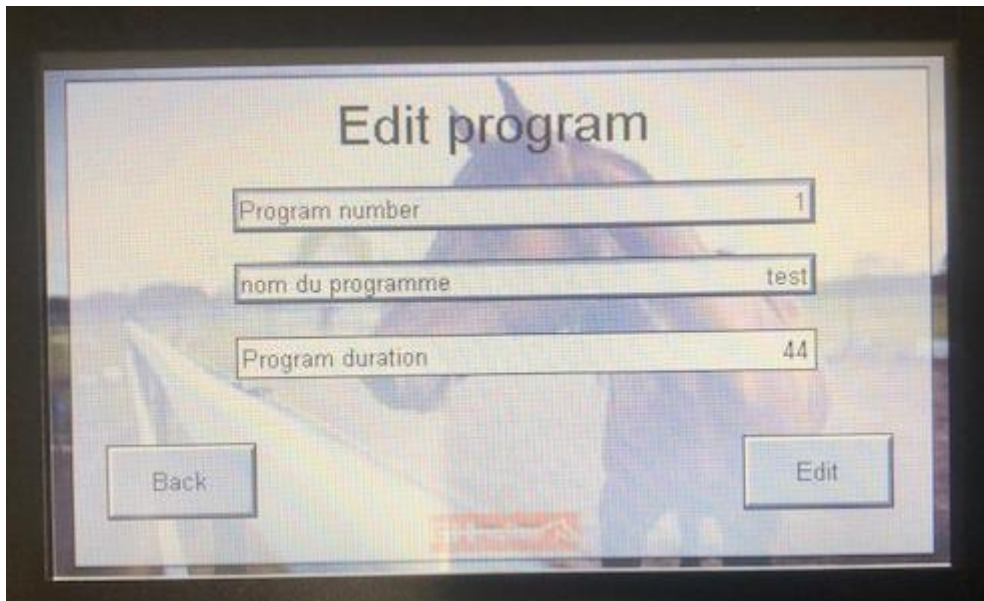

Buttons:

- Back: back to the main menu
- Edit: edit the current program

Display:

- Program number: edit the number of the program




- Program name: edit the name of the program



- Program duration: total time of the program. This is calculated automatically

After you give in number and name you can start programming by pressing “Edit”

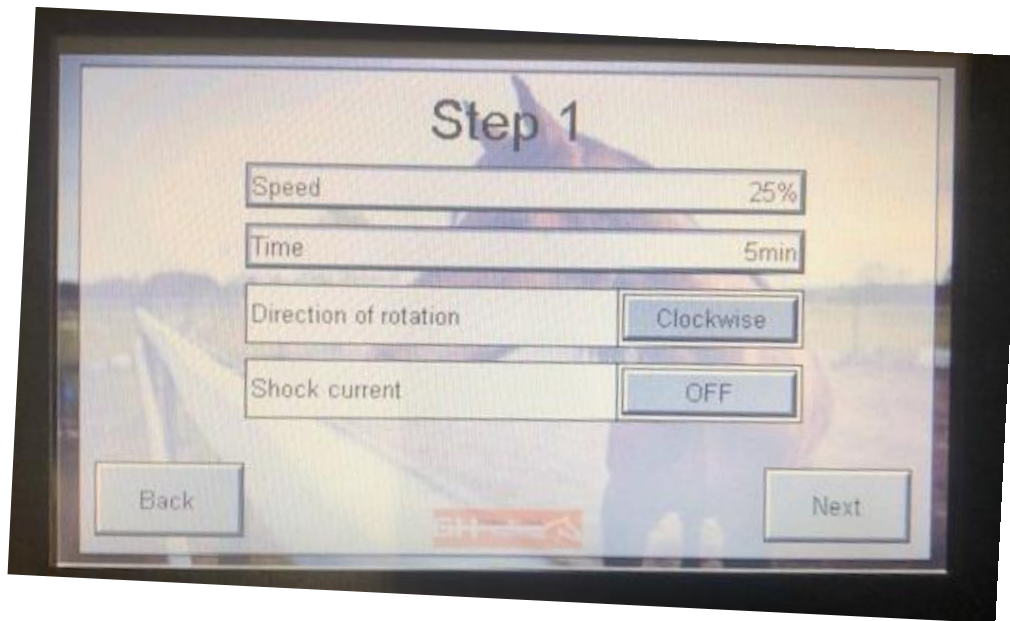


Buttons:

- Back: back to the main menu
- Next: go to the next step (total of 10 step2 per program)

Display:

- Speed: enter the % speed. 100% is maximum speed (*tip: first test manual what % you want*)
- Time: enter the time of the step (in minutes)
- Direction of rotation: Clockwise of Couter clockwise
- Shock current: Electricity on fence on/off

You can repeat step 1 for the other steps (total of 10 steps). (*tip: if you only use 2 steps, leave the time by the other steps 0*)

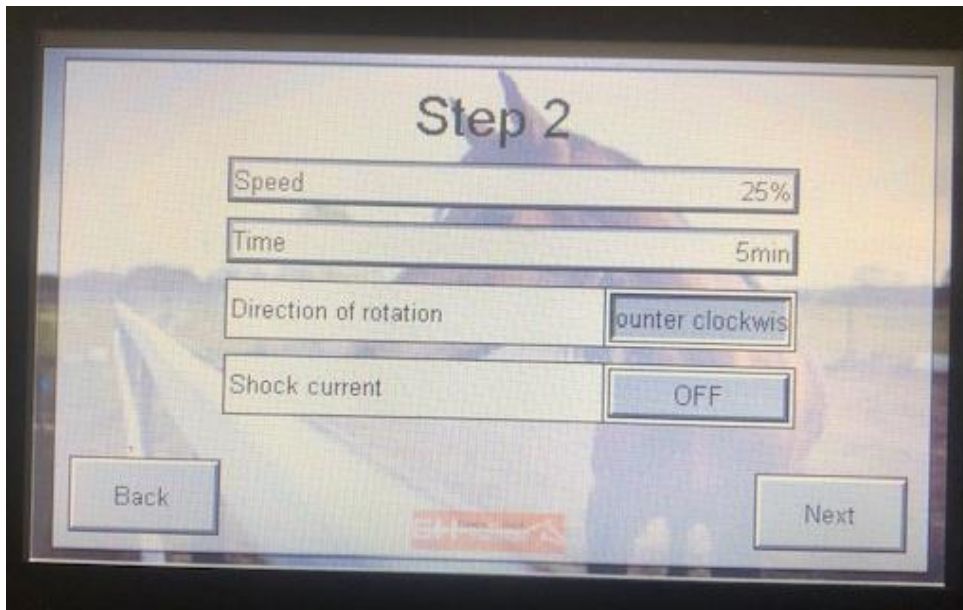

When you are ready programming your steps, press the back button to go back to the main menu.

5. Load program




Buttons:

- Back: back to the main menu
- Next: start the selected program

Display:

- Program number: enter the number of the program you want to start
- Name program: displays the name you give to the program
- Program duration: displays the duration of the total program (in minutes)

After pressing “Next” you come in the following screen:

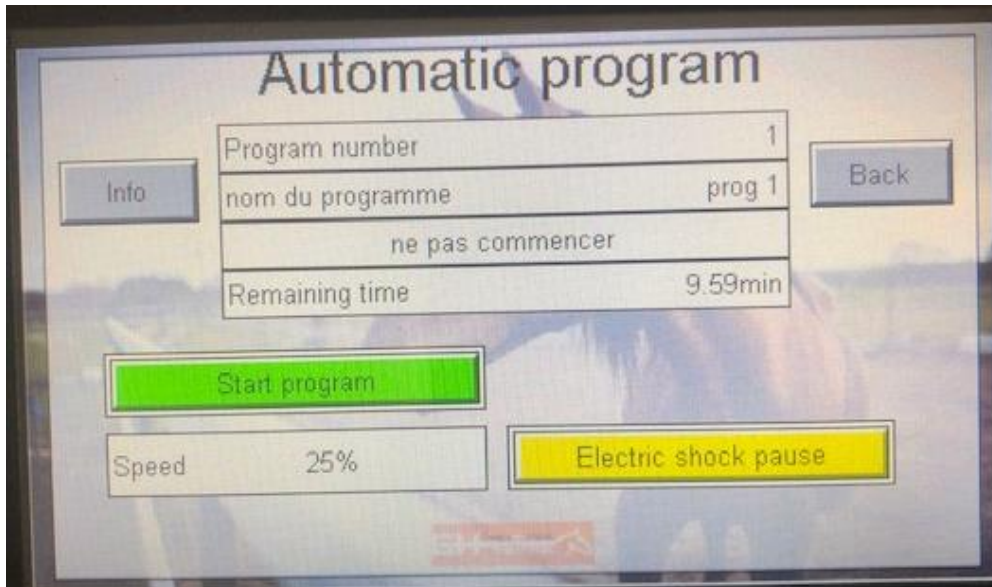

Buttons:

- Info: displays the current motor status
- Back: back to the previous menu
- Start / Stop program
- Electric shock pause/on

Display:

- Program number: displays the number of the program you run
- Name program: displays the name you give to the program
- Remaining time: displays the remaining time of the total program (in minutes and seconds)
- Speed: % of the maximum speed

6. Language



Buttons:

- Back: back to the previous menu
- NL-En-De-Fr-Es

Display:

- Current selected language